 


TOSHIBA

2.1CH Soundbar with Wireless Subwoofer Model: C210WR

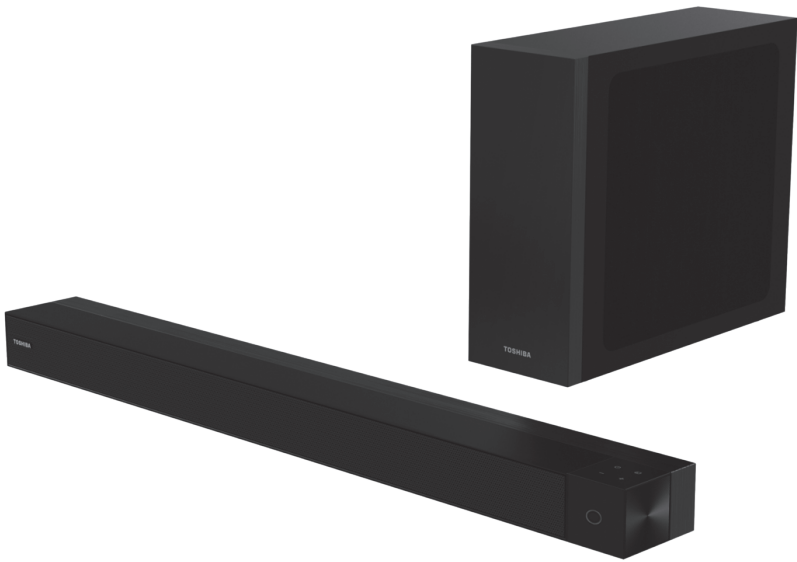

 **Dolby** Audio

 **Bluetooth**[®]

HDMI[™]
HIGH-DEFINITION MULTIMEDIA INTERFACE

dts
virtual **X**[™]

USER MANUAL



Before using the soundbar, please read this manual thoroughly and retain it for future reference.

Contents

1. Important Safety Instructions	3
1.1 Safety	3
1.2 Warning	4
2. What's in the Box	5
3. Product Diagram	6
3.1 Soundbar	6
3.2 Wireless Subwoofer	6
3.3 Remote Control	7
4. Preparations	7
4.1 Prepare the Remote Control	7
4.2 Replace the Remote Control Battery	7
4.3 Placement and Mounting	8
4.4 Wall Mounting (if using option-B)	8
5. Connections	9
5.1 Use the HDMI ARC Socket	9
5.2 REGZA Surround Flow	9
5.3 Use the TOSHIBA Easy Control Function	9
5.4 Use the OPTICAL Socket	10
5.5 Use the AUX Socket	10
5.6 Connect Power	10
6. Pair up with the Subwoofer	10
6.1 Automatic pairing	10
6.2 Manual pairing	10
7. Basic Operation	11
7.1 Standby/ON	11
7.2 Auto-Standby / Auto-Wake	11
7.3 Select Input Source	11
7.4 Adjust the Volume	11
7.5 Turn the Surround Sound ON/OFF	12
7.6 Select Equalizer (EQ) Effect	12
7.7 Adjust the Bass/Treble	12
7.8 Adjust the Indicator Brightness	12
7.9 Notice On/Off	12
7.10 Factory reset	12
8. OPTICAL/HDMI ARC/AUX Operation	12
9. USB Operation	12
10. Bluetooth Operation	13
11. Troubleshooting	14
12. Specifications	15

1. Important Safety Instructions




The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude as to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

1.1 Safety

- 1 Read these instructions** – All the safety and operating instructions should be read before this product is operated.
 - 2 Keep these instructions** – The safety and operating instructions should be retained for future reference.
 - 3 Heed all warnings** – All warnings on the appliance and in the operating instructions should be adhered to.
 - 4 Follow all instructions** – All operating and usage instructions should be followed.
 - 5 Do not use this apparatus near water** – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool and the like.
 - 6 Clean only with a dry cloth.**
 - 7 Do not block any ventilation openings.** Install in accordance with the manufacturer’s instructions.
 - Do not install near any heat sources such as radiators, heaters, stoves, or other apparatus (including amplifiers) that produce heat.
 - Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety.
- If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
 - Only use attachments/accessories specified by the manufacturer.
 -  Use only with the cart, stand, tripod, bracket or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
 - Unplug the apparatus during lightning storms or when unused for long periods of time.
 - Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the unit has been exposed to rain or moisture, does not operate normally, or has been dropped.
 - This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.
 - The apparatus shall not be exposed to dripping or splashing. No objects filled with liquids, such as vases, shall be placed on the apparatus.
 - Minimum distance around the apparatus for sufficient ventilation is 5cm.
 - The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
 - No naked flame sources, such as lighted candles, should be placed on the apparatus.
 - Batteries should be recycled or disposed of as per state and local guidelines.
 - The use of apparatus in moderate or tropical climates.

Caution:

- Use of controls or adjustments or performance of procedures other than those described herein, may result in hazardous radiation exposure or other unsafe operation.
- To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus must not be exposed to dripping or splashing and objects filled with liquids, such as vases, must not be placed on apparatus.
- The mains plug/appliance coupler is used as the disconnect device, the disconnect device must remain readily operable.
- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

1.2 Warning

- The battery (batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.
- Before operating this system, check the voltage of this system to see if it is identical to the voltage of your local power supply.
- Do not place this unit close to strong magnetic fields.
- Do not place this unit on the amplifier or receiver.
- If any solid object or liquid falls into the system, unplug the system and have it checked by qualified personnel before operating it any further.
- Do not attempt to clean the unit with chemical solvents as this may damage the finish. Use a clean, dry or slightly damp cloth.
- When removing the power plug from the wall outlet, always pull directly on the plug, never yank on the cord.
- Changes or modifications to this unit not expressly approved by the party responsible for compliance will void the user's authority to operate the equipment.
- The rating label is pasted on the bottom or back of the equipment.

Battery usage CAUTION

To prevent battery leakage which may result in bodily injury, property damage, or damage to the apparatus:

- Install all batteries correctly, + and - as marked on the apparatus.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (Carbon-Zinc) or rechargeable (Ni-Cd, Ni-MH, etc.) batteries.
- Remove batteries when the unit is not used for a long time.



Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU.



To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

 


Hereby, XinYang (Hong Kong) Co., Ltd. Declares that the radio equipment type is in compliance with Directive 2014/53/EU and Radio Equipment Regulations 2017 of UK.


2. What's in the Box




Soundbar




Remote Control /
AAA Batteries x 2

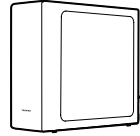 

Wireless subwoofer

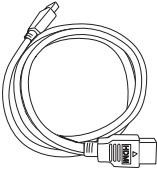 


HDMI cable

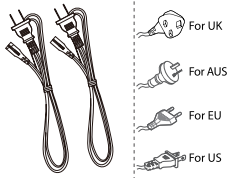 

AC Power cord *



 Brackets (x2) / Bracket Screw (x2)
/ Wall Anchors (x2)




Warranty card/Quick start guide/
Wall mount guide

- * Power cord quantity and plug type vary by regions.**The accessories may be different from the list above due to different models, countries/ regions, please refer to the actual accessory bag.
- Images, illustrations and drawings shown on this User Manual are for reference only, actual product may vary in appearance.

3. Product Diagram

 3.1 Soundbar

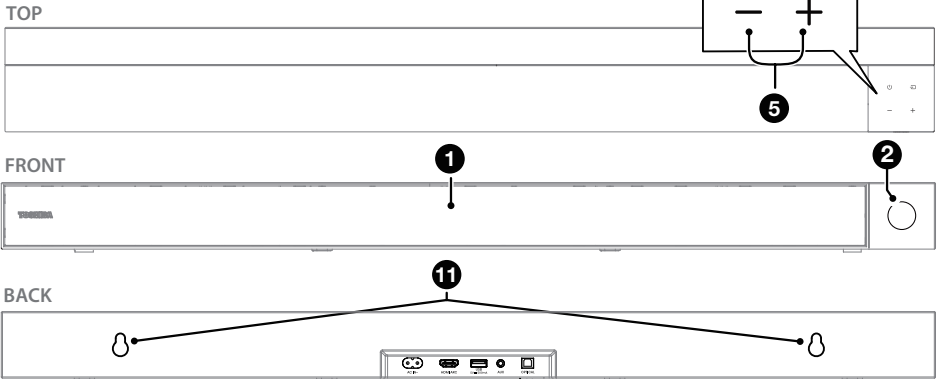


- ① **Remote Control Sensor**
Receive signal from the remote control.


② **LED Indicators**

Lamp	Mode
● Red	Standby
● Orange	OPTICAL
● White	HDMI ARC
● Blue	BT (Bluetooth)
● Yellow	USB
● Green	AUX

  - ③ **⏻ (ON/OFF) Button**
Switch the soundbar between ON and Standby mode.
- ④ **📺 (SOURCE) Button**
Select the Input Source.
- ⑤ **+ / - (Volume) Buttons**
Increase/decrease the volume level.
- ⑥ **AC IN~ Socket**
Connect to the power supply.
- ⑦ **HDMI ARC Socket**
Connect to a TV via HDMI cable.
- ⑧ **USB Socket**
Insert the USB device to play music.
- ⑨ **AUX Socket**
Connect to an external audio device.
- ⑩ **OPTICAL Socket**
Connect to an optical audio output on the TV.
- ⑪ **Wall Mount**

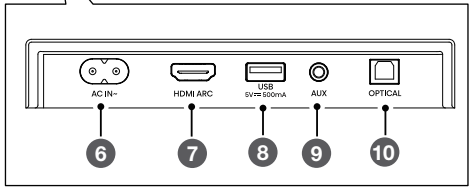



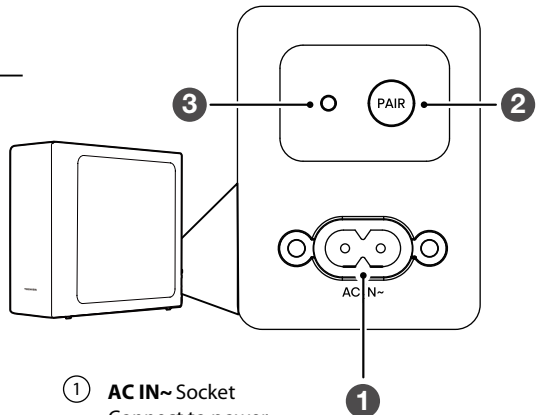




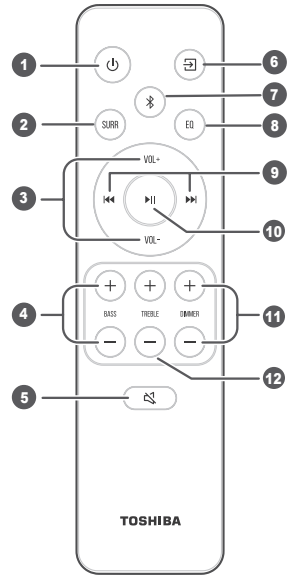 
3.2 Wireless Subwoofer



- ① **AC IN~ Socket**
Connect to power.
- ② **PAIR button**
Press activate the pairing function between the Soundbar and the Subwoofer.
- ③ **PAIR Indicator**
Light stops blinking once the Subwoofer is paired with the Soundbar.

3.3 Remote Control

- 1  Switch the Soundbar between ON and STANDBY mode.
- 2 **SURR** Switch the Surround ON/OFF.
- 3 **VOL+ /VOL-** Increase/decrease the volume level.
- 4 **BASS +/-** Adjust bass level.
- 5  (**MUTE**) Mute or resume the sound.
- 6  (**Source**) Button Select the input source.
- 7  Select the Bluetooth mode.
Press and hold to activate the pairing function in Bluetooth mode or disconnect the existing paired Bluetooth device.
- 8 **EQ** Select MUSIC/MOVIE/NEWS//GAME/SPORT/ NIGHT
- 9   Skip to previous/next track in Bluetooth/USB mode.
- 10  Play/pause/resume playback in Bluetooth/USB mode. Press and hold the button for 3s to enter setup menu.
- 11 **DIMMER +/-** Adjust LED brightness.
- 12 **TREBLE +/-** Adjust treble level.



4. Preparations

 
4.1 Prepare the Remote Control

The provided Remote Control allows the unit to be operated from a distance.

- Even if the Remote Control is operated within the effective range 19.7 feet (6m), remote control operation may be impossible if there are any obstacles between the unit and the remote control.
- If the Remote Control is operated near other products which generate infrared rays, or if other remote control devices using infra-red rays are used near the unit, it may operate incorrectly. Conversely, the other products may operate incorrectly.

4.2 Replace the Remote Control Battery

- 1 Press and slide the back cover to open the battery compartment of the remote control.
- 2 Insert two **AAA** size batteries. Make sure the (+) and (-) ends of the batteries match the (+) and (-) ends indicated in the battery compartment.
- 3 Close the battery compartment cover.

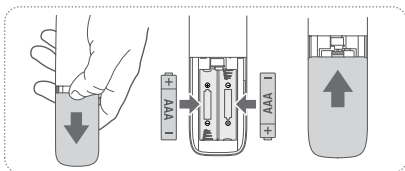


Precautions Concerning Batteries

- Be sure to insert the batteries with correct positive “+” and negative “-” polarities.
- Use batteries of the same type. Never use different types of batteries together.
- Either rechargeable or non-rechargeable batteries can be used. Refer to the precautions on their labels.
- Be aware of your fingernails when removing the battery cover and the battery.
- Do not drop the remote control.
- Do not allow anything to impact the remote control.
- Do not spill water or any liquid on the remote control.
- Do not place the remote control on a wet object.
- Do not place the remote control under direct sunlight or near sources of excessive heat.
- Remove the battery from the remote control when not in use for a long period of time, as corrosion or battery leakage may occur and result in physical injury, and/or property damage, and/or fire.
- Do not use any batteries other than those specified.
- Do not mix new batteries with old ones.
- Never recharge a battery unless it is confirmed to be a rechargeable type.

4.3 Placement and Mounting

Placement

 - A If your TV is placed on a table, you can place the Soundbar on the table directly in front of the TV stand, centered with the TV screen.
- B If your TV is attached to a wall, you can mount the Soundbar on the wall directly below the TV screen.

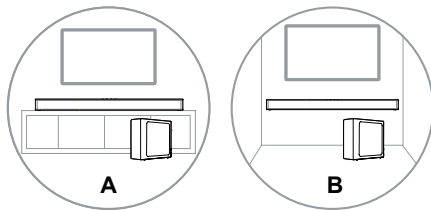

4.4 Wall Mounting (if using option-B)

 
Note:

- Installation must be carried out by qualified personnel only. Incorrect assembly can result in severe personal injury and property damage (if you intend to install this product yourself, you must check for installations such as electrical wiring and plumbing that may be buried inside the wall). It is the installer's responsibility to verify that the wall will safely support the total load of the Soundbar and wall brackets.
- Additional tools (not included) are required for the installation.
- Do not overtighten screws.
- Keep this instruction manual for future reference.
- Use an electronic stud finder to check the wall type before drilling and mounting.

WARNING

- To prevent injury, this Soundbar must be securely attached to the floor/wall in accordance with the installation instructions.
- Suggested wall mounting height: ≤ 1.5 meters.


1. Drill 2 parallel holes ($\varnothing 5.5$ -6 mm each according to wall type) in the wall. The distance between the holes should be 596mm/23.46"
2. Insert the supplied wall anchors into 2 screw holes on the wall. Insert the supplied wall bracket screws through the wall brackets into the wall anchors. Fix and tighten the screws on the wall.
3. Hang the Soundbar on the wall mount brackets.

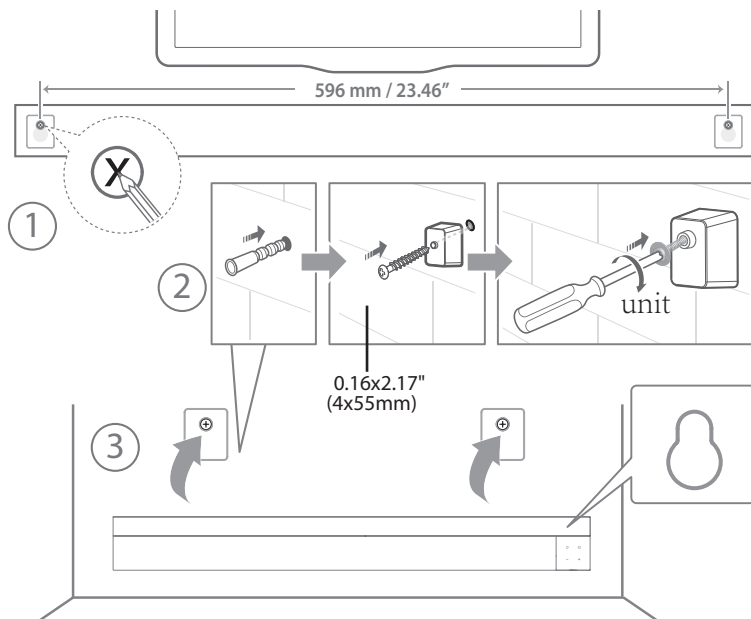

5. Connections

5.1 Use the HDMI ARC Socket

 The ARC (Audio Return Channel)function allows you to send audio from your ARC-compliant TV to your soundbar through a single HDMI connection. To enjoy the ARC function, please ensure your TV is both HDMI-CEC and ARC compliant and set up accordingly. When correctly set up, you can use your TV remote control to adjust the volume output (VOL+/-and MUTE) of the soundbar.

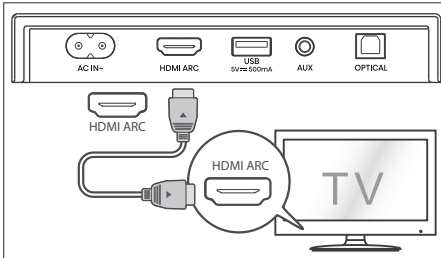


Tips:

- Your TV must support the HDMI-CEC and ARC function. HDMI-CEC and ARC must be set to On.
- The setting method of HDMI-CEC and ARC may differ depending on the TV. For details about ARC function, please refer to the owner's manual.
- Only HDMI 1.4 or higher version cable can support the ARC function.

5.2 REGZA Surround Flow

 This function allows the Soundbar to acquire audio processing capabilities of the TV (including Dolby Atmos sound effect), achieving a better Surround sound effect. You can select all the Sound Modes of TV.To enable this function, turn on REGZA Surround Flow on your TOSHIBA TV menu. (Soundbar Settings > REGZA Surround Flow

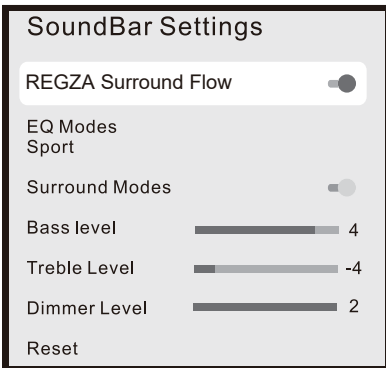


NOTE

This function works when the Soundbar connects to some of the TOSHIBA TVs. After enabling, the Surround option and EQ Modes of the Soundbar will be disabled.


5.3 Use the TOSHIBA Easy Control Function

 For TOSHIBA Easy Control, when the Soundbar connects with a TOSHIBA TV via HDMI ARC,there will be a Soundbar Setting menu on the TV, and you can control this menu via you TV remote to control most of the Soundbar features.

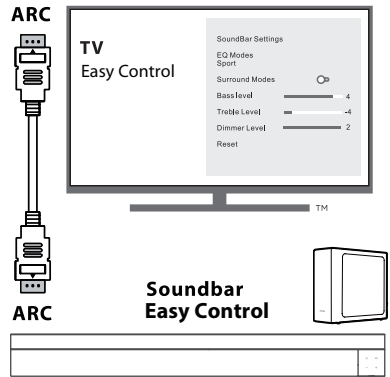

TV menu example (different models may have different menus) :

 Setting--Sound--Soundbar Setting.

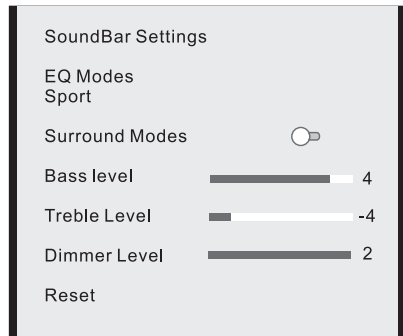


Note:

- This function is available only when both Soundbar and TV support TOSHIBA Easy Control.
- This function requires Soundbar and TV connected via HDMI ARC, and the CEC of the TV must be turned ON.
- If everytime setting right, for the first time connect, there would be a tip on the TV screen to guide you find the Soundbar setting menu.

5.4 Use the OPTICAL Socket

 
- Connect an OPTICAL cable to the TV's OPTICAL OUT socket and the OPTICAL socket on the unit.

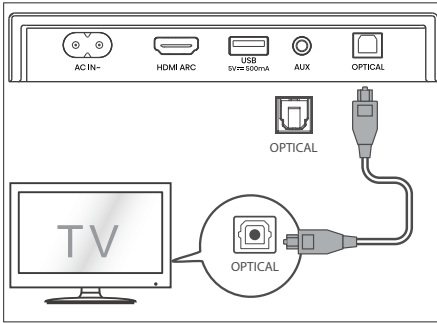

Tip: The Soundbar may not be able to decode all digital audio formats from the input source. In this case, the Soundbar will mute. This is NOT a defect. Ensure that the audio setting of the input source (e.g. TV, game console, DVD player, etc.) is set to **PCM** or **Dolby Digital** (Refer to the user manual of the input source device for its audio setting details) with HDMI ARC / OPTICAL input.

5.5 Use the AUX Socket

 - Use a 3.5mm to 3.5mm audio cable to connect the TV's or external audio device headphone socket to the **AUX** socket on the unit.
- Use a RCA to 3.5mm audio cable to connect the TV's audio output sockets to the **AUX** socket on the unit.

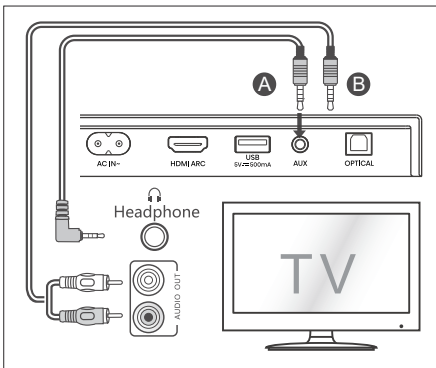

5.6 Connect Power

Risk of product damage!

 
- Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the unit.
- Before connecting the AC power cord, ensure you have completed all other connections.

Soundbar

- Connect the mains cable to the **AC IN~** socket of the Soundbar and then into a mains socket.

Subwoofer

- Connect the mains cable to the **AC IN~** socket of the Subwoofer and then into a mains socket.

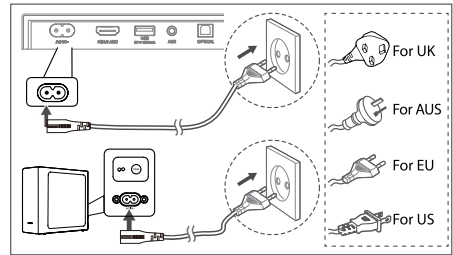

* Power cord quantity and plug vary by regions.

6. Pair up with the Subwoofer

6.1 Automatic pairing

The Subwoofer and Soundbar will automatically pair when both units are plugged into the mains sockets and turned on. No cable is needed for connecting the two units.


 
- Determine the status based on the wireless Subwoofer indicator.

Lamp	Status
Fast blink	Subwoofer in pairing mode
Slow blink	Connection / Pairing Failed
Constant on	Connected / Pairing successful

NOTE:

- Do not press the **PAIR** button on the rear of the Subwoofer, except for manual pairing.
- If the automatic pairing fails, pair the Subwoofer with the Soundbar manually.

6.2 Manual pairing

1. Ensure that all the cables are well connected and the Soundbar is in Standby mode.
2. Press the  button on the Soundbar or remote control to switch the Soundbar on.
3. Press and hold the **PAIR** button on the rear of the Subwoofer for a few seconds. The Subwoofer will enter the pairing mode and the Pair Indicator will blink quickly.
4. Press and hold the  button on the Soundbar or on the remote control for a few seconds to enter pairing mode. There will be a voice prompt saying **"SUBWOOFER PAIRING"**.
5. After the wireless connection succeeded, the Pair Indicator will light up and there will be a voice prompt saying **"SUBWOOFER CONNECTED"**.
6. If the Pair indicator blinks, the wireless connection has failed. Unplug the cable of the Subwoofer and then reconnect the main cable after 4 minutes. Repeat step 1 ~ 4.



NOTE:

- If the wireless connection fails again, check if there is conflict or strong interference (for example, interference from an electronic device) around your location. Remove these conflicts or strong interferences and repeat the above procedures.
- The subwoofer should be within 6m (19.7 feet) of the soundbar in an open area.
- If the Soundbar is not connected with the Subwoofer and it is in On mode, the Power Indicator will flash. Follow step 1 ~ 4 above to pair the Subwoofer to the Soundbar.

7. Basic Operation

7.1 Standby/ON

When you first connect the Soundbar to the mains socket, the Soundbar will be in Standby mode.

 
 
- Press the  button on the Soundbar or on the remote control to switch the Soundbar ON.
- Press the  button again to switch the Soundbar back to STANDBY mode.
- Disconnect the mains plug from the mains socket if you want to switch the Soundbar OFF completely.

7.2 Auto-Standby / Auto-Wake

[Auto-Standby] The Soundbar automatically turns to Standby mode after about 15 minutes if the TV or the external soundbar is disconnected (or USB, BT function bit playback pause), or switched off.



[Auto-Wake] If a TV or an external device is connected (AUX / OPTICAL socket), the Soundbar will switch on automatically when the TV or the external device is switched on.

Auto-standby ON/OFF

Switch the Soundbar on the optical mode, double click the  (x2) and  (x2) buttons on the remote control to activate and deactivate the auto-standby:


Auto Standby	
On	Your Soundbar has been programmed to enter Standby mode automatically when no audio is detected for 15 minutes.
Off	You can turn off the Auto Standby to keep your Soundbar always working.


Activate and Deactivate the Auto-Wake:

Turn on the Soundbar, press the  [] [-] button at the same time on the Soundbar to activate and deactivate the auto-wake:



Auto-Wake	
On	The Soundbar will wake up automatically when audio input is detected.
Off	The Soundbar does not wake up automatically.

7.3 Select Input Source

- Press the  (SOURCE) button repeatedly on the unit or on the remote control to select the desired mode.
- The indicator light on the front of the Soundbar will show which mode is currently in use.

 Lamp	Mode
● Red	Standby
● Orange	OPTICAL
● White	HDMI ARC
● Blue	BT (Bluetooth)
● Yellow	USB
● Green	AUX

7.4 Adjust the Volume

- Press the **VOL+ / VOL-** buttons on the Soundbar or on the remote control to adjust the volume.
- If you wish to turn the sound off, press the  (MUTE) button on the remote control. Press the  (MUTE) button again or press the **VOL + / -** buttons to resume normal listening.

7.5 Turn the Surround Sound ON/OFF

- Press the **SURR** button on the remote control to turn on the Surround sound. Press this button again to turn off the Surround sound.

7.6 Select Equalizer (EQ) Effect

- While playing, press the **EQ** button on the remote control to select desired preset equalizers: **music, movie, news, game, sport, night**.

7.7 Adjust the Bass/Treble



- Press the **BASS + / -** buttons on the remote control to adjust bass level.
- Press the **TREBLE + / -** buttons on the remote control to adjust treble level.

7.8 Adjust the Indicator Brightness

- Press the **DIMMER + / -** button on the remote control to select indicator brightness level.

7.9 Notice On/Off

- Press and hold the Power [**U**] button and the VOL+ button on the unit simultaneously for 3 seconds to turn on or off notice.

Status	LED State
Notice OFF	 (Solidly red LEDs flash 3 times)
Notice ON	 (Solidly green LEDs flash 3 times)

7.10 Factory reset


Reset device to default setting.

- Switch the Soundbar on the optical mode, press and hold the [**U**] button on the Soundbar, the Soundbar will enter factory reset mode and turn to standby state.

MODE	DEFAULT
SOURCE	ARC
Volume	30
Surround	ON
Bass	0
Treble	0
EQ	Music
Auto Wake	OFF
Auto Standby	ON

(Except the USA/Canada/Mexico)

 
8. AUX/ OPTICAL/HDMI ARC Operation


- Ensure that the Soundbar is connected to the TV or audio device.
- Press the  button repeatedly on the Soundbar or on the remote control to select **AUX, OPTICAL, HDMI ARC** mode.
- Operate your audio device directly for playback features.
- Press the **VOL + / -** button to adjust the volume to your desired level.


Tip: The Soundbar may not be able to decode all digital audio formats from the input source. In this case, the Soundbar will mute. This is NOT a defect. Ensure that the audio setting of the input source (e.g. TV, game console, DVD player, etc.) is set to **PCM** or **Dolby Digital** (Refer to the user manual of the input source device for its audio setting details) with HDMI ARC / OPTICAL input.


9. USB Operation

  - Insert the USB device.

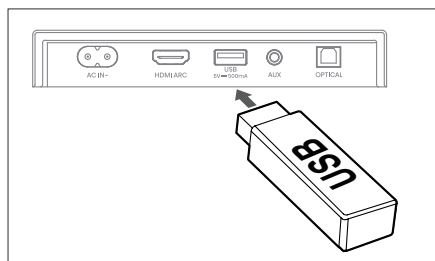

- Press the  button repeatedly on the unit or on the remote control to select **USB** mode.
- During playback:

 Start, pause or resume play

 Skip to the previous or next track

Tips:

- The Soundbar can support USB devices with up to 32 GB of memory.
- This Soundbar can play WAV / WMA / MP3 / FLAC.
- This product may not be compatible with certain types of USB storage devices.
- If you use a USB extension cable, USB hub, or USB Multifunctional card reader, the USB storage device may not be recognized.
- Do not remove the USB storage device while reading files.


10. Bluetooth Operation

Through Bluetooth, connect the Soundbar with your Bluetooth device (such as an iPad, iPhone, iPod touch, Android phone, or laptop), and then you can listen to the audio files stored on the device through your Soundbar speakers.

First time pairing


- 1 Press the  (SOURCE) button on the Soundbar or the  button on the remote control to select **Bluetooth** mode. Blue indicator will flash slowly.
 - 2 Activate your Bluetooth device and select the search mode.
 - 3 Select "**TOSHIBA C210WR**" in the pairing list. After audio prompt, the system is successfully connected and Blue indicator will light up solidly.
- If you want to connect your Soundbar with another Bluetooth device, press and hold the  button on the remote control to disconnect the currently connected Bluetooth device. Follow step 2-3 to pair your Bluetooth device.


To disconnect the Bluetooth function, you can :

- Switch to another function on the Soundbar.
- Disable the function from your Bluetooth device.
- Press and hold the  button, the Bluetooth device will be disconnected from the Soundbar.

Listen to music from Bluetooth Device

- If the connected Bluetooth device supports Advanced Audio Distribution Profile (A2DP), you can listen to the music stored on the device through the player.
 - If the device also supports Audio Video Remote Control Profile (AVRCP), you can use the player's remote control to play music stored on the device.
1. Pair your device with the player.
 2. Play music via your device (if it supports A2DP).
 3. Use supplied remote control to control play (if it supports AVRCP).

 Start, pause or resume play

 Skip to the previous or next track

Tips:

- The operational range between the Sound Bar and the device is approximately 8 metres.
- Before connecting a Bluetooth® device to the Sound Bar, ensure you know the device's capabilities.
- Compatibility with all Bluetooth® devices is not guaranteed.
- Any obstacle between the device and the Sound Bar can reduce operational range.
- Keep this player away from other electronic devices that may cause interference.
- The player will also be disconnected when your device is moved beyond the operational range.

11. Troubleshooting

To keep the warranty valid, never try to repair the system yourself. If you encounter problems when using Soundbar unit, check the following points before requesting service.



 
No power

- Ensure that the AC cord of the apparatus is properly connected.
- Ensure that there is power at the AC outlet.
- Press standby button to turn the Soundbar on.

Remote control does not work

- Before you press any playback control button, first select the correct source.
- Reduce the distance between the remote control and the Soundbar.
- Insert the battery with its polarities (+/-) aligned as indicated.
- Replace the battery.
- Aim the remote control directly at the sensor on the front of the Soundbar.

No sound

- Make sure that the Soundbar is not muted. Press  or VOL+/- button to resume normal listening.
- Press  button on the Soundbar or on the remote control to switch the Soundbar to standby mode. Then press the  button again to switch the Soundbar on.
- Unplug both the Soundbar and the Subwoofer from the mains socket, then plug them again. Switch on the Soundbar.
- Ensure the audio setting of the input source (e.g. TV, game console, DVD player, etc.) is set to PCM or Dolby Digital mode while using digital (e.g. HDMI, OPTICAL) connection.
- The Subwoofer is out of range, please move the Subwoofer closer to the Soundbar. Make sure the Subwoofer is within 5 m of the Soundbar (the closer the better).
- The soundbar may have lost connection with the subwoofer. Re-pair the units by following the steps on the section "Pairing the Wireless Subwoofer with the Soundbar".
- The Soundbar may not be able to decode all digital audio formats from the input source. In this case, the Soundbar will mute. This is NOT a defect, device is not muted.

I can't find the Bluetooth name of this unit on my Bluetooth device for Bluetooth pairing

- Ensure the Bluetooth function is activated on your Bluetooth device.
- Ensure you have paired the unit with your Bluetooth device.

The Soundbar turns off

- When the unit's external input signal level is too low, the unit will be turned off automatically in 15 minutes. Please increase the volume level of your external device.

The Subwoofer is idle or the indicator of Subwoofer do not light up.

- Please unplug power cord from the mains socket, and plug it in again after 4 minutes to reset the Subwoofer.

12.Specifications

Brand	TOSHIBA
Model	C210WR

Soundbar

Power Supply	100-240V~ 50/60Hz
Power Consumption	15 W < 0.5 W (StandBy)
USB	5V \equiv 500mA Hi-Speed USB (2.0) / FAT32 / FAT16 32G (max) , WAV / WMA / MP3 / FLAC.
Dimension (WxHxD)	800 x 59.5 x 90mm/31. 5"x 2.4" x3.5"
Net weight	1.75 kg
Audio input sensitivity	500mV
Frequency Response	120Hz - 20KHz
Operating Temperature	0°C - 40°C

Wireless Specification

Bluetooth version / profiles	V 5.4 (A2DP)
Bluetooth frequency range	2400 MHz ~ 2483.5 MHz
Bluetooth Max. transmitting power	\leq 5 dBm
Modulation Type	GFSK, $\pi/4$ -DQPSK, 8DPSK .

Subwoofer

Power Supply	100-240V~ 50/60Hz
Power Consumption	15 W < 0.5 W (StandBy)
Dimension (W x H x D)	350 x 120 x303mm / 13.8" x4.7"x 11.9"
Net weight	3.85 kg
Frequency Response	40Hz - 150Hz

Amplifier (Max Audio Power)

Total	240 W
Soundbar	60 W x 2
Subwoofer	120 W

Remote Control

Distance/Angle	19.7 feet (6m) / 30°
Battery type	AAA (1.5V x 2)

- Design and specifications are subject to change without notice.

Trademarks



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by TOSHIBA is under license. Other trademarks and trade names are those of their respective owners.



The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.



Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories.



Manufactured under license from DTS, Inc. and/or its affiliates. For patents, see <https://xperi.com/dts-patents/>. DTS, the DTS logo, Digital Surround, Virtual:X, and the DTS Virtual:X logo are trademarks or registered trademarks of DTS, Inc. and/or its affiliates in the U.S. and/or other countries. © DTS, Inc. and/or its affiliates. All rights reserved.





WARNING: This product can expose you to chemicals including Lead, which is known to the State of California to cause cancer. For more information go to: www.P65Warnings.ca.gov.



FR

EN

Réglement de la FCC (pour les clients américains)

FCC INFORMATION (for US customers)

NOTE:

- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
- However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio / TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
 - (2) this device must accept any interference received, including interference that may cause undesired operation.
- Shielded cables must be used with this unit to ensure compliance with the Class B FCC limits.

IC Notice: CAN ICES-3(B)/NMB-3(B)

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

Warning:

- This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.
- Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment."

REMARQUE :

- Ce dispositif a été testé et déclaré conforme aux limites d'un dispositif numérique de classe B, conformément à la partie 15 des règles de la FCC.
Ces limites ont pour but d'assurer une protection raisonnable contre le brouillage nuisible dans une installation résidentielle. Cet équipement produit, utilise et peut émettre de l'énergie en radio fréquence et, s'il n'est pas installé et utilisé conformément aux directives, il peut causer un brouillage nuisible dans les communications radio.
- Cependant, il n'est pas garanti que des interférences ne se produiront pas dans une installation particulière. Si cet appareil provoque des interférences nuisibles à la réception radio ou de télévision, ce qui peut être déterminé en mettant l'appareil hors tension, l'utilisateur est encouragé à essayer de corriger l'interférence par une ou plusieurs des mesures suivantes :
 - Réorienter ou déplacer l'antenne de réception.
 - Augmenter la distance entre l'appareil et le récepteur.
 - Brancher l'appareil à une prise sur un circuit différent de celui sur lequel le récepteur est branché.
 - Consulter le revendeur ou un technicien radio/TV expérimenté.

Cet appareil est conforme à la partie 15 des règles de la FCC. Son fonctionnement est soumis aux deux conditions suivantes :

- (1) ce dispositif ne peut pas causer d'interférences nuisibles et
 - (2) cet appareil doit accepter toute interférence reçue, y compris les interférences qui peuvent causer un mauvais fonctionnement.
- Des câbles blindés doivent être utilisés avec cet appareil pour assurer la conformité avec les limites de la classe B de la FCC. fonctionnement de l'appareil.

Avis d'Industrie Canada: CAN ICES-3(B)/NMB-3(B)

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

1. L'appareil ne doit pas produire de brouillage;
2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Avvertissement :

- Pour rester en conformité avec les consignes d'exposition aux RF, placez le produit à au moins 20 cm des personnes proches.
- Les changements ou modifications de cet appareil non expressément approuvées par la partie responsable de la conformité pourraient annuler l'autorisation de l'utilisateur à utiliser l'équipement.


TOSHIBA

C210WR



08866

版本	料号	日期	变更记录	变更需求
V1		2025/3/6	--MP	
V2		2025/3/20		客户
V2		2025/4/10		客户
V3		2025/4/11		客户
V4		2025/4/15		客户
V5		2025/4/1		客户
V6		2025/4/16		客户

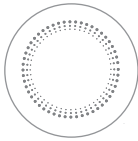 

08866

(英语)

FSC 森林卫士		料号	12.005.0004.08866		尺寸(mm)	展开尺寸: 290x210, 成型尺寸: 145x210		环保要求	说明书类说明: 1. 公差 (mm): 0 < a ≤ 50 (+0.3/-0.2), 50 < a ≤ 150 (+1/-0.5), > 150 (+1.5/-1, 有特殊要求的, 按标示公差执行。 2. 要求图文清晰可辨, 内容完整, 折叠正确, 无重影、墨尿、杂点、脏点、异物、粉点、套印不准。 3. 尺寸按展开尺寸及成型外尺寸测量计算。
项目名称	C210WR	产品型号	C210WR	材质	80g书写纸		■RoHS2.0、Reach	<input type="checkbox"/> 包装指令94/62/EC	
日期	2025/07/14	部件名称	说明书(英语)	说明P数	/p		<input type="checkbox"/> 大豆油墨印刷		
包装工程师	金沛	平面工程师	LIHONG	颜色	单色印刷		<input type="checkbox"/> 无氯漂白工艺		
设计版本	变更提出人	变更原因		是否有可参考	表面处理	<input type="checkbox"/> 无 <input type="checkbox"/> 光油 <input type="checkbox"/> 哑油 <input type="checkbox"/> 水性光油 <input type="checkbox"/> 水性哑油 <input type="checkbox"/> UV油 <input type="checkbox"/> 光胶 <input type="checkbox"/> 覆膜 <input type="checkbox"/> 防刮花镀膜		<input type="checkbox"/> 粘合剂为非石油基	
A0	客户			工艺	<input type="checkbox"/> 无 <input type="checkbox"/> 烫金 <input type="checkbox"/> 烫银 <input type="checkbox"/> 击凸 <input type="checkbox"/> 击凹 <input type="checkbox"/> 丝网 <input type="checkbox"/> 局部UV <input type="checkbox"/> 其它		<input type="checkbox"/> 油墨中禁止使用有害物 (欧盟)		
				条码要求	<input type="checkbox"/> 无条码 <input checked="" type="checkbox"/> 有条码 (清晰易扫描)		<input type="checkbox"/> TPCH (美国)		
				■符号: 12.005.0004.08866	装订方式	<input type="checkbox"/> 风琴折 <input type="checkbox"/> 包心折 <input checked="" type="checkbox"/> 骑马钉 <input type="checkbox"/> 胶装 <input type="checkbox"/> 线装 <input type="checkbox"/> 其它			

版本: A/4